


Assembly Instructions for Punk range.

Tools required:

Philips Screwdriver

1. Tighten pins in pre drilled holes using a screwdriver, keeping item flat.
2. Insert cams into larger holes and slide cam over pins in opposite board.
3. Tighten screw inside cam to fix the joint.
4. Repeat for all cams and pins.

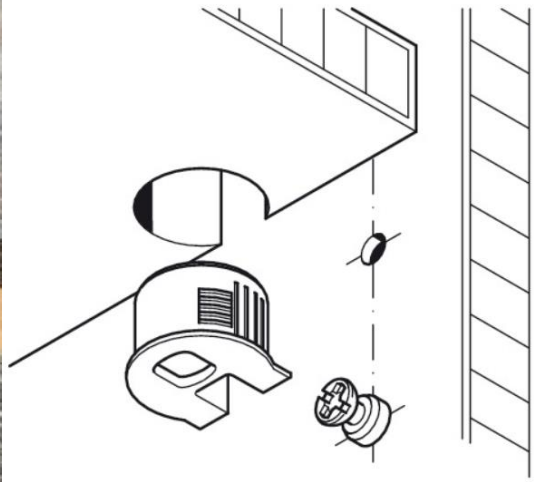

5. Screw legs onto base using pre drilled holes in the board and the screws provided.